User Guide

<XPEREYE> + ODG R7




 \bigwedge


Before using the solution:

Make sure the devices are fully charged. Charging information is available on the pertugge


POWERING UP




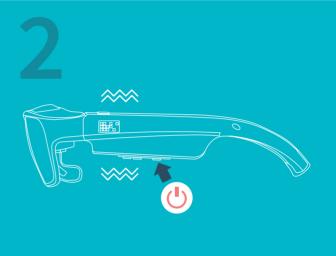

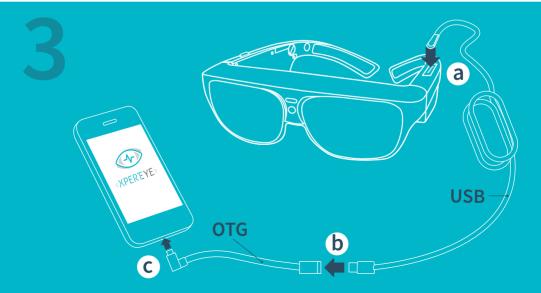

POWERING OFF/CHARGING

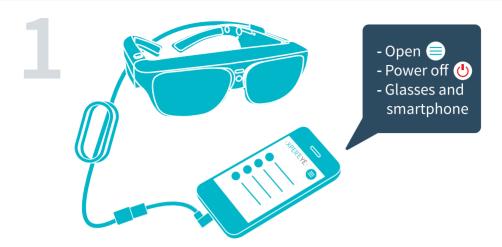

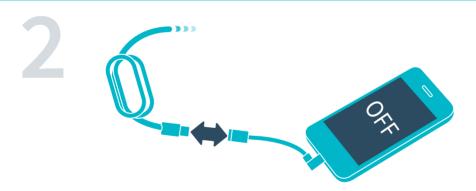

3

