


*Make sur that you are connected to the Internet and logged in to XpertEye. If not, see sheet 1. Check if you are on the same region. If not, see sheet 11.*

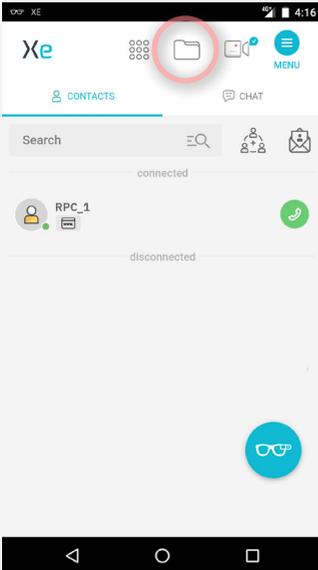

## Take pictures during a call

During a call, you can take a picture by pressing the  icon.

The picture is taken and the Board is opened.

## Send a picture into the glasses

# 1

You cannot send a picture from the **My files**  folder into the glasses during a call. You can do it outside of a call.

Press the  icon.

**Note:** You can nonetheless, always send a picture into the glasses from the Board during a call.

### EMEA

Europe, Middle East, Africa  
+33 (0)2 55 59 09 22

[support.emea@amaxpertheye.com](mailto:support.emea@amaxpertheye.com)

### AMERICAS

North and South America  
(+1) 857 271 5001

[support.northamerica@amaxpertheye.com](mailto:support.northamerica@amaxpertheye.com)


### APAC

Asia-Pacific  
(+852) 300 16 030

[support.apac@amaxpertheye.com](mailto:support.apac@amaxpertheye.com)

# 7

## TAKE PICTURES DURING A VIDEO CALL AND SEND THEM TO THE SMART GLASSES (2/3)

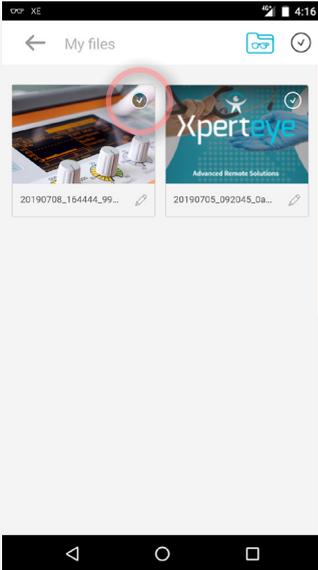

# 2

Select an image.



# 3

Send the image to the glasses by pressing the



icon.

### EMEA

Europe, Middle East, Africa  
+33 (0)2 55 59 09 22

[support.emea@amaxpertheye.com](mailto:support.emea@amaxpertheye.com)

### AMERICAS

North and South America  
(+1) 857 271 5001

[support.northamerica@amaxpertheye.com](mailto:support.northamerica@amaxpertheye.com)


### APAC

Asia-Pacific  
(+852) 300 16 030

[support.apac@amaxpertheye.com](mailto:support.apac@amaxpertheye.com)

<https://support.amaxpertheye.com>



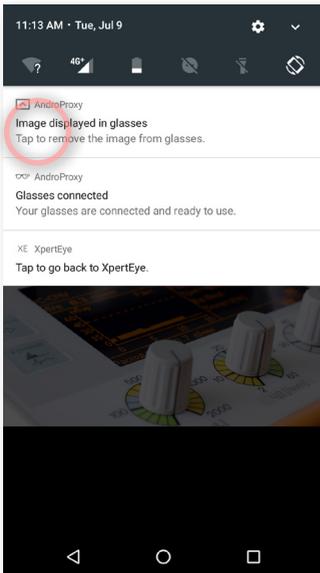

## 4

- 1 To remove an image from the glasses, swipe down the notification bar of the screen.
- 2 Press **Image displayed in glasses**.

## EMEA

Europe, Middle East, Africa  
+33 (0)2 55 59 09 22

[support.emea@amaxperteye.com](mailto:support.emea@amaxperteye.com)

## AMERICAS

North and South America  
(+1) 857 271 5001

[support.northamerica@amaxperteye.com](mailto:support.northamerica@amaxperteye.com)

## APAC

Asia-Pacific  
(+852) 300 16 030

[support.apac@amaxperteye.com](mailto:support.apac@amaxperteye.com)

<https://support.amaxperteye.com>

