




Digital Accelerator

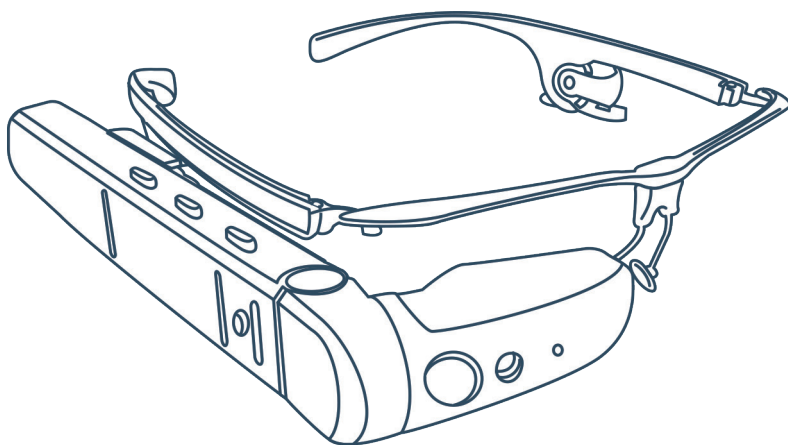


Vuzix M400 *Getting Started*

XpertEye Advanced

A. Vuzix M400


If the smartphone or the Vuzix M400 battery is discharged, charge it before using the XpertEye solution. Go to section C – “Power off and charge the XpertEye solution”.

1

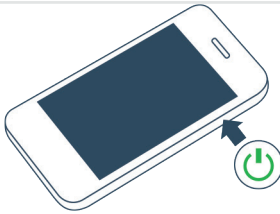


Turn on the smartphone.

2

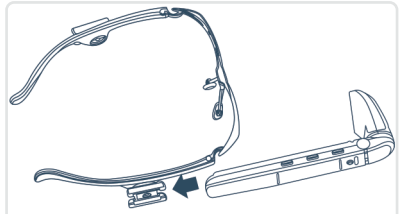


Slide the Vuzix M400 into the frame bracket.

3

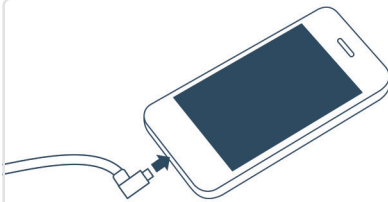

Connect the USB-C cable to the smartphone.


4

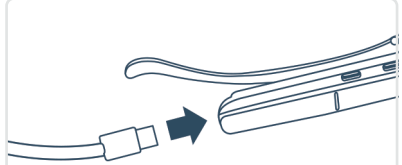

Connect the USB-C cable to the Vuzix M400.

Note: Auto power on - 20 sec.
When the Vuzix M400 battery is empty, the glasses switch on only after 5 to 10 min.

5

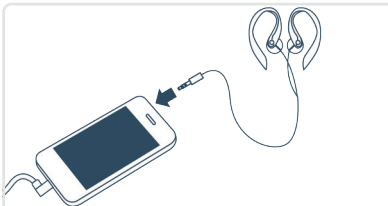


Connect the headphones to the smartphone.

B. Vuzix M400, Holster and Battery Hub

If the smartphone, the Vuzix M400 or the battery hub is discharged, charge it before using the XpertEye solution. Go to section C – “Power off and charge the XpertEye solution”.

1

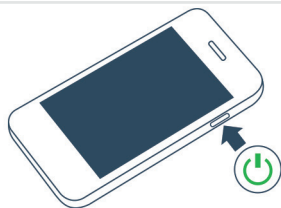

Turn on the smartphone.


2



Turn on the hub mode of the battery hub by double pressing the power on button.

Note: A blue light indicates that the hub mode is on.

3

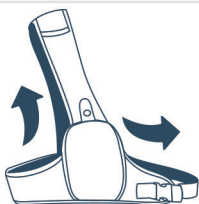


Unfold the holster.

4



Insert the USB-C cable into the holster.

5

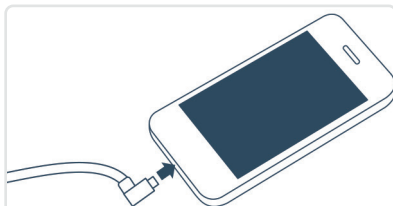

Connect the USB-C cable to the smartphone.

6




Attach the smartphone to the holster pocket.

7




Connect the USB-C cable to the battery hub.

8

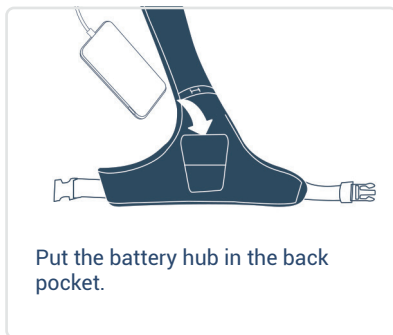


Put the battery hub in the back pocket.

9

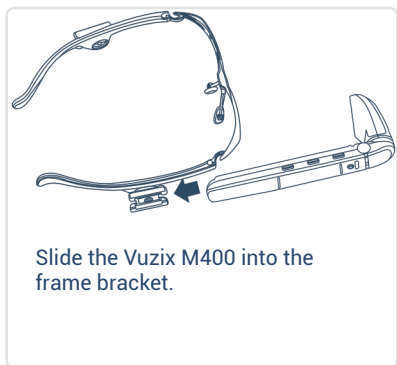


Slide the Vuzix M400 into the frame bracket.

10

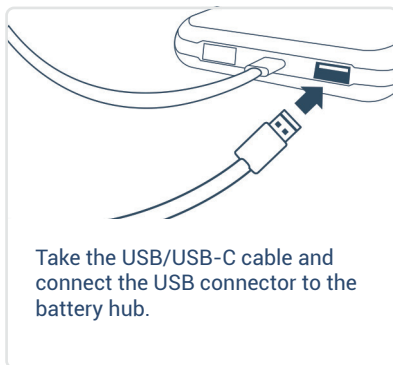

Take the USB/USB-C cable and connect the USB connector to the battery hub.


11

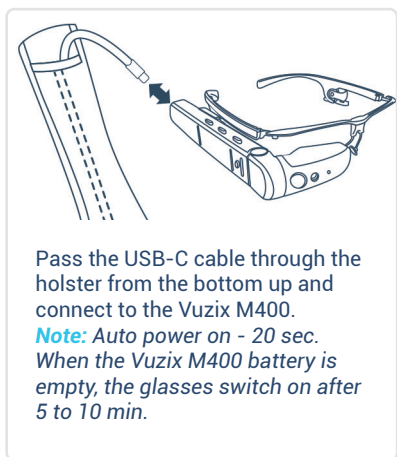

Pass the USB-C cable through the holster from the bottom up and connect to the Vuzix M400.

Note: Auto power on - 20 sec.
When the Vuzix M400 battery is empty, the glasses switch on after 5 to 10 min.


12

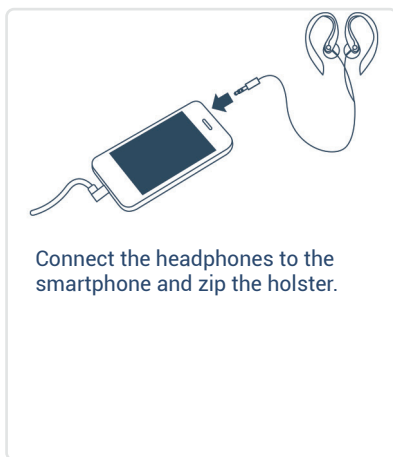

Connect the headphones to the smartphone and zip the holster.


C. Switch off and charge the XpertEye solution

1

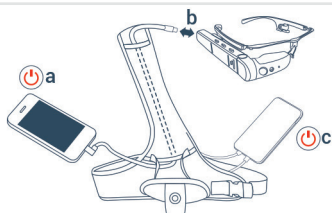

- a. From the smartphone, go to the XpertEye menu, press on **Power Off > GLASSES AND SMARTPHONE**.
- b. Unplug the Vuzix M400.
- c. Press the power button of the battery hub once.

2

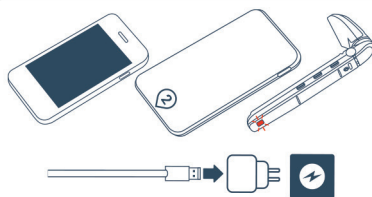

- a. Connect the USB-C cable to the smartphone and charge it using a wall charger.
- b. Repeat this step with the Vuzix M400 and the battery hub (port n°2).

Note:

Vuzix M400 charging time: 2 hours

Green light: Charged

Blinking red light: Low battery

Blank lined paper for writing.



Blank lined paper for writing.



