


Send a picture into the smart glasses

Send a picture into the smart glasses of one or more participants during an XpertEye video call.

Prerequisites: Make sure that you are connected to the Internet and logged in to XpertEye.

1. During a call, you can take a picture by selecting the  icon. The picture is taken and the Board is opened.

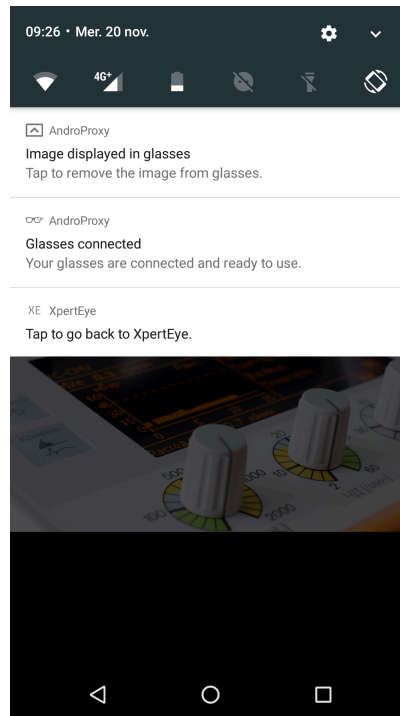




2. You can send this photo into the smart glasses screen of one or more participants by pressing the  icon.
3. Select the desired participant(s) and press **SEND**.

The selected participants receive the sent image in their glasses.

4. To remove an image from the smart glasses, swipe down the notification bar of the smartphone and press  **Image displayed in glasses**.

Send a picture into the smart glasses



5. From the XpertEye interface, delete the image in the smart glasses by selecting the  icon on the board.
6. You cannot send a picture from the My files  folder into the smart glasses during a call. You can do it outside of a call following this procedure.

Note: You can also send a zoomed photo into the smart glasses. This photo will be saved in the Timeline of your Board.