




Digital Accelerator

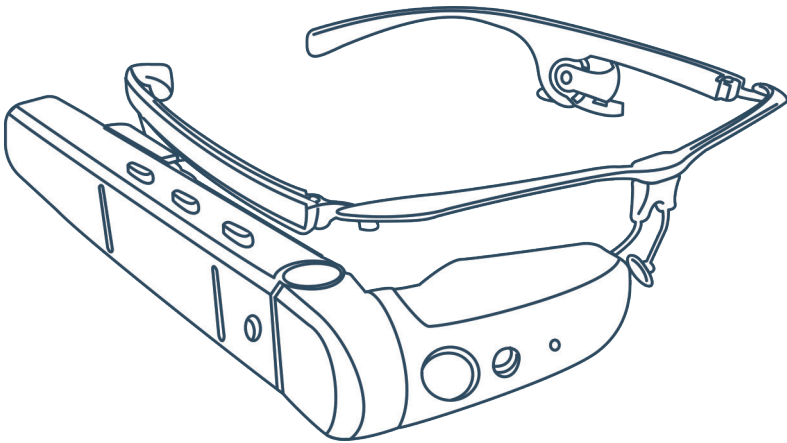

Vuzix M400

Getting Started


XpertEye Advanced

amaxperteye.com

A. Vuzix M400


Before using the XpertEye solution, make sure the device (smartphone or tablet) and the Vuzix M400 are charged. For more information refer to section C – “Exit and charge the XpertEye solution”.

1

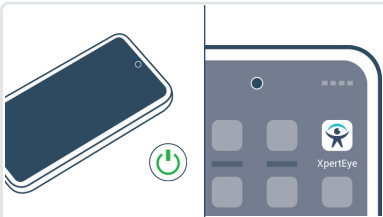


Turn on the device and launch the XpertEye Advanced application.

2

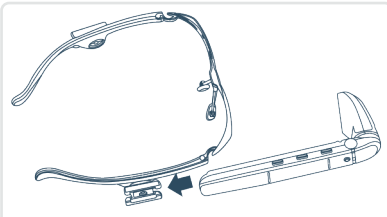


Slide the Vuzix M400 into the frame bracket.

3

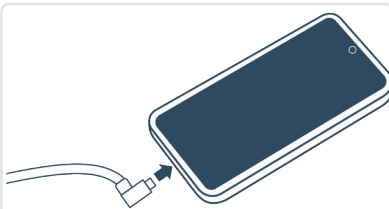

Connect the USB-C cable to the device.


4

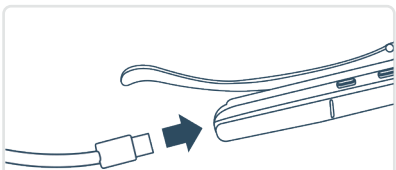

Connect the USB-C cable to the Vuzix M400.


Note: Auto power on - 20 sec.
When the Vuzix M400 battery is empty, the glasses will take 5 to 10 min to power on.

5

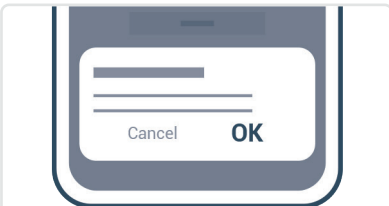

Once the Vuzix M400 are on, go to the XpertEye Advanced application and accept the Android authorization requests to use the Vuzix M400 camera.

6

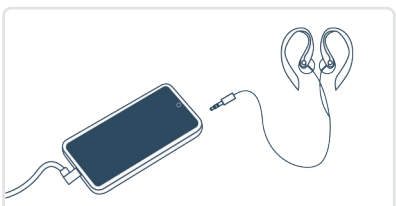


Connect the earphones to the device.

B. Vuzix M400, Holster and Power Bank*


Before using the XpertEye solution, make sure the device (smartphone or tablet), the Vuzix M400 battery, and the power bank are charged. For more information refer to section C – “Exit and charge the XpertEye solution”.

1

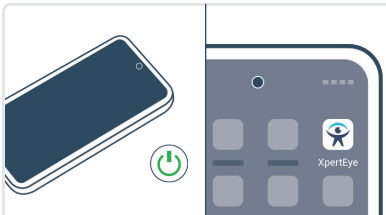


Turn on the device and launch the XpertEye Advanced application.

2

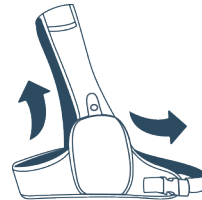


Unfold the holster.

3

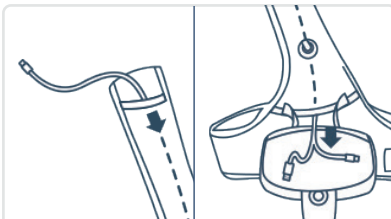


Pass the Y cable through the holster. The dual end down and the single end up.

4

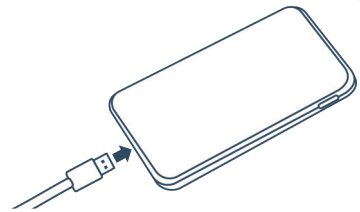

Connect the USB-A port (dual end) to the power bank.

5

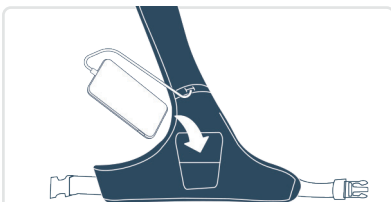


Put the power bank in the back pocket.

6




Connect the USB-C port (dual end) to the smartphone.

7

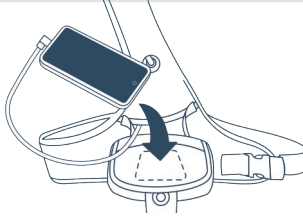


Attach the device to the holster pocket.

8

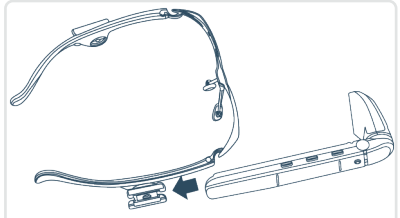

Slide the Vuzix M400 into the frame bracket.

9

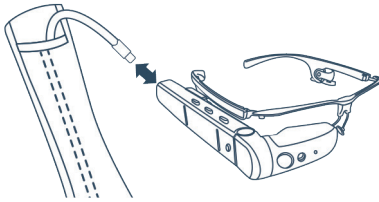

Connect the USB-C port (single end) to the Vuzix M400.


Note: Auto power on - 20 sec.
When the Vuzix M400 battery is empty, the glasses will take 5 to 10 min to power on.

10




Once the Vuzix M400 is on, go the the XpertEye Advanced application and accept the Android authorization requests to use the glasses camera.

11

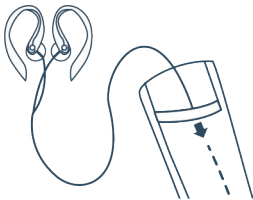

Pass the earphones through the holster, from top to the bottom.

12

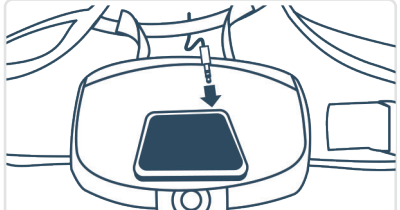


Connect the earphones to the device and zip the holster.

*** The holster and the power bank may not be included in your XpertEye Advanced kit.**


C. Exit and charge the XpertEye solution

1

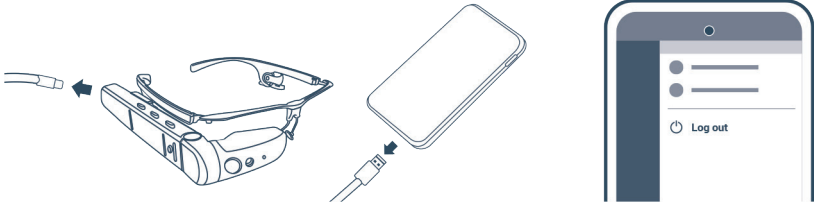

- Unplug the Vuzix M400. The glasses automatically shut down after 5 minutes.
- Unplug the power bank.
- From the XpertEye menu, press **Log out**.

2

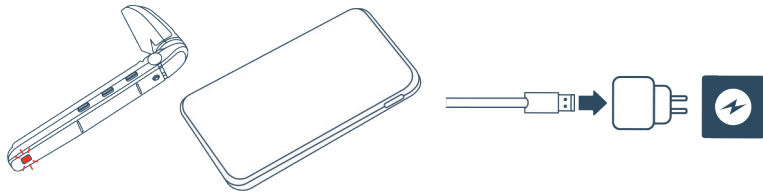

- Connect the USB/USB-C cable to the Vuzix M400 and charge it using a wall charger.
- Charge the power bank using a wall charger.
- Charge the device with the dedicated charger.

Note:

Vuzix M400 charging time: 2 hours

Green light: Charged

Blinking red light: Low battery

