




Digital Accelerator

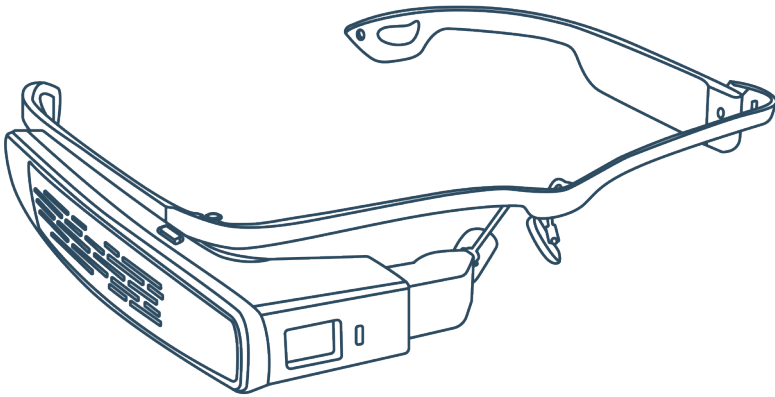

LLVision GLXSS SE

Getting Started


XpertEye Advanced

amaxperteye.com

A. LLVision GLXSS SE


Before using the XpertEye solution, make sure the device (smartphone or tablet) is charged. For more information refer to section C – “Exit and charge the XpertEye solution”.

1

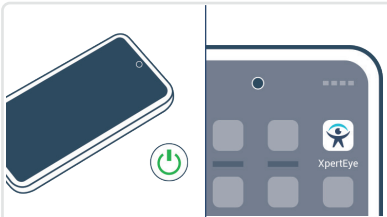


Turn on the device and launch the XpertEye Advanced application.

2

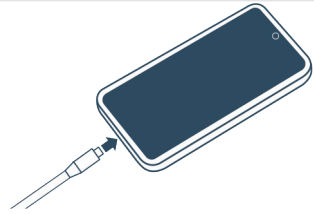

Connect the USB-C cable to the device.


3

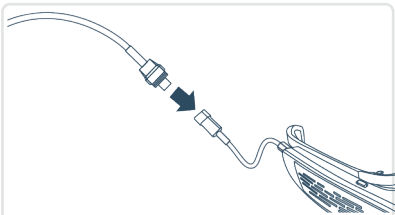

Connect the USB-C cable to the LLVision.


Note: Auto power on - 5 sec. A white LED will light up.

4

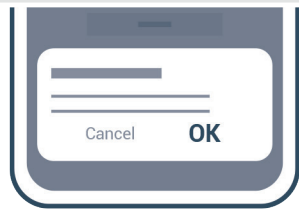

Once the LLVision are on, go to the XpertEye Advanced application and accept the Android authorization requests to use the glasses' camera.

5

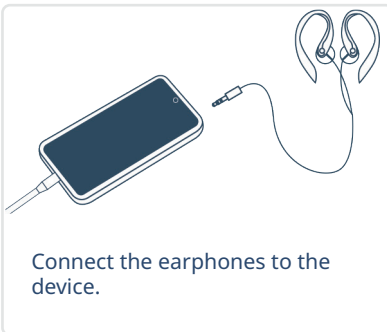

Connect the earphones to the device.

B. LLVision GLXSS SE, Holster and Power Bank*


Before using the XpertEye solution, make sure the device (smartphone or tablet) and the power bank are charged. For more information refer to section C – “Exit and charge the XpertEye solution”.

1




Turn on the device and launch the XpertEye Advanced application.

2

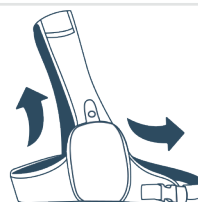


Unfold the holster.

3

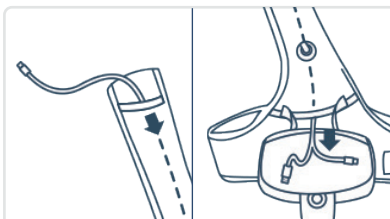


Pass the Y cable through the holster. The dual end down and the single end up.

4

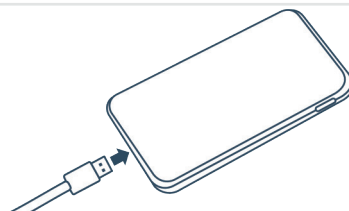


Connect the purple USB-A port to the power bank.

5

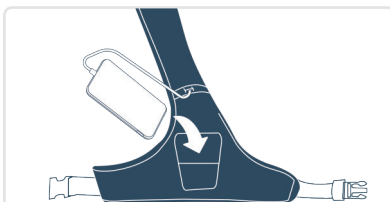


Put the power bank in the back pocket.

6

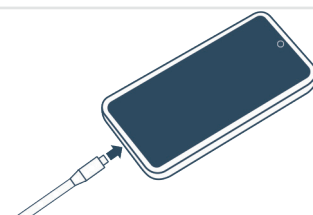


Connect the white USB-C port to the device.

7

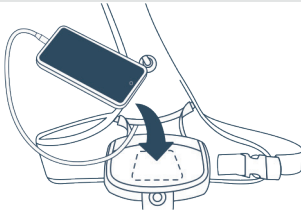

Attach the device to the holster pocket.


8

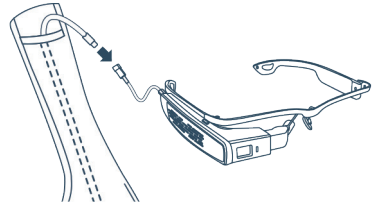

Connect the blue USB-C port to the glasses. The glasses automatically switch on.


Note: Auto power on - 5 sec. A white LED will light up.

9

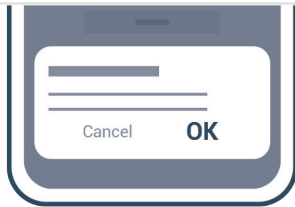


Once the LLVision are on, go to the XpertEye Advanced application and accept the Android authorization requests to use the glasses' camera.

10

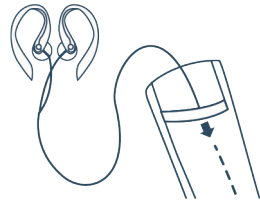

Pass the earphones through the holster, from top to bottom.

11

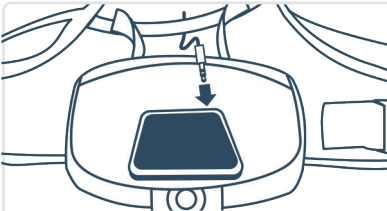


Connect the earphones to the device and zip the holster.

*** The holster and the power bank are optional and may not be included in your XpertEye Advanced kit.**


C. Exit and charge the XpertEye solution

1

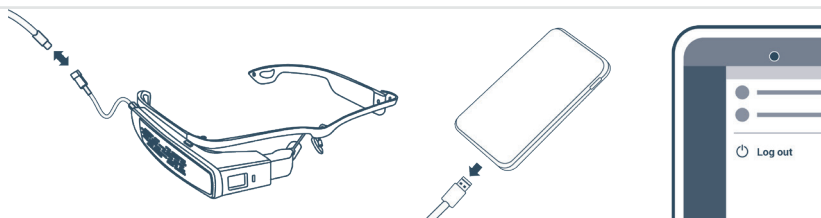

- Unplug the LLVision. The glasses automatically shut down.
- Unplug the power bank.
- From the XpertEye menu, press **Log out**.

2

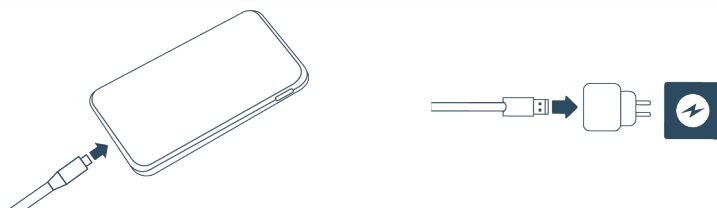

- Connect the power bank and charge it using a wall charger.
- Charge the device (smartphone/tablet) with the dedicated charger.

Note: Please make sure the device is fully charged. The LLVision GLXSS SE are functional as long as the device has enough battery.

